

JT

Hot Air Station Without Extractor Desk

Ref.: **JTSE-1QB** 100/120V


JTSE-2QB 230V

SPARE PARTS	
JTU CONTROL UNIT:	
-ENCLOSURES:	
·TOP	0019028
·BOTTOM	0026196
·FRONT	0026199
·BACK	0026195
FOR REF. JTSE-1UA:	
-CIRCUIT	0024361
-SUCTION PUMP	0026338
-HOT AIR PUMP	0018769
FOR REF. JTSE-2UA:	
-CIRCUIT	0024360
-SUCTION PUMP	0026337
-HOT AIR PUMP	0018769

Ref.: **JTSE-1UA** 100/120V FUSE T-8A
JTSE-2UA 230V FUSE T-4A




PH217

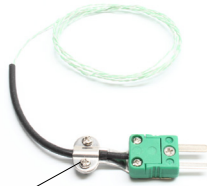


PH218

JTU CONTROL UNIT

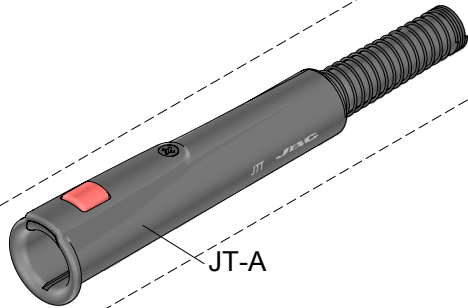


JT-A


0014107 (230V)
 0014105 (100V, 120V)

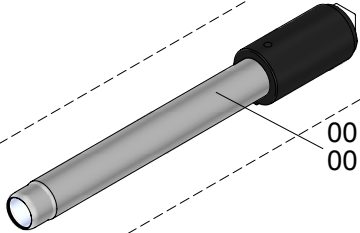

JT-T2A (230V)
 JT-T1A (100V, 120V)

 


JN2020

 

JN2012



JN2015

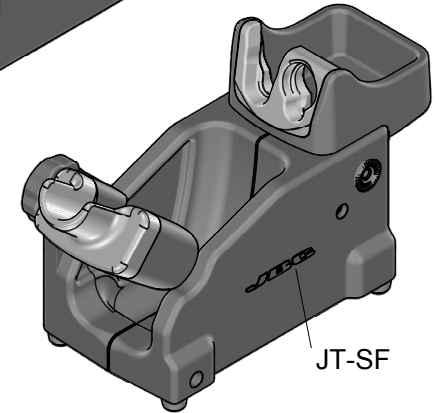

JT-SF