





# JTSE Power Hot Air Station

This Plug & Play Guide corresponds to the following references:

Ref.

JTSE-9B (100 V) JTSE-1B (120 V) JTSE-2B (230 V)



#### **Packing List**

The following items are included according purchased station reference:



JTSE Hot Air Control Unit ..... 1 unit Ref. JTSE-9UA (100 V) Ref. JTSE-1UA (120 V) Ref. JTSE-2UA (230 V)



JTS



Stand ..... 1 unit Ref. JT-SF





JTT Heater Hose Set ..... 1 unit Ref. JT-T1A (100V / 120V) Ref. JT-T2A (230V)



JN2015 JTT Bent Nozzle Ø 4 mm - 18 ° .... 1 unit Ref. JN2015



PH217 Kapton Tape ..... 1 unit Ref. PH217



JN2012 JTT Bent Nozzle Ø 6 mm - 18 ° .... 1 unit Ref. JN2012



PH218 Thermocouple Type K .....1 unit Ref. PH218




JN2020 JTT Straight Nozzle Ø 8 mm ...... 1 unit Ref. JN2020






ESHT Magazine for Protectors & Extractors ..... 1 unit Ref. ESHT-A

## Installation

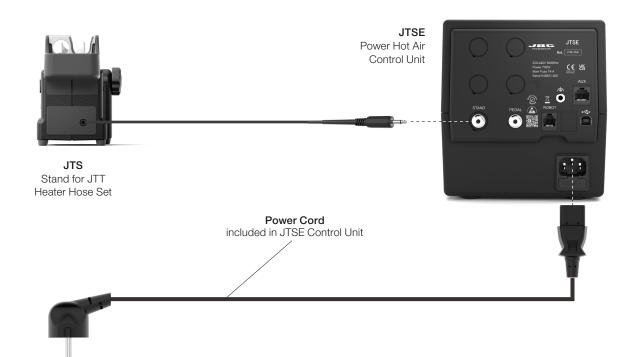

## Installation

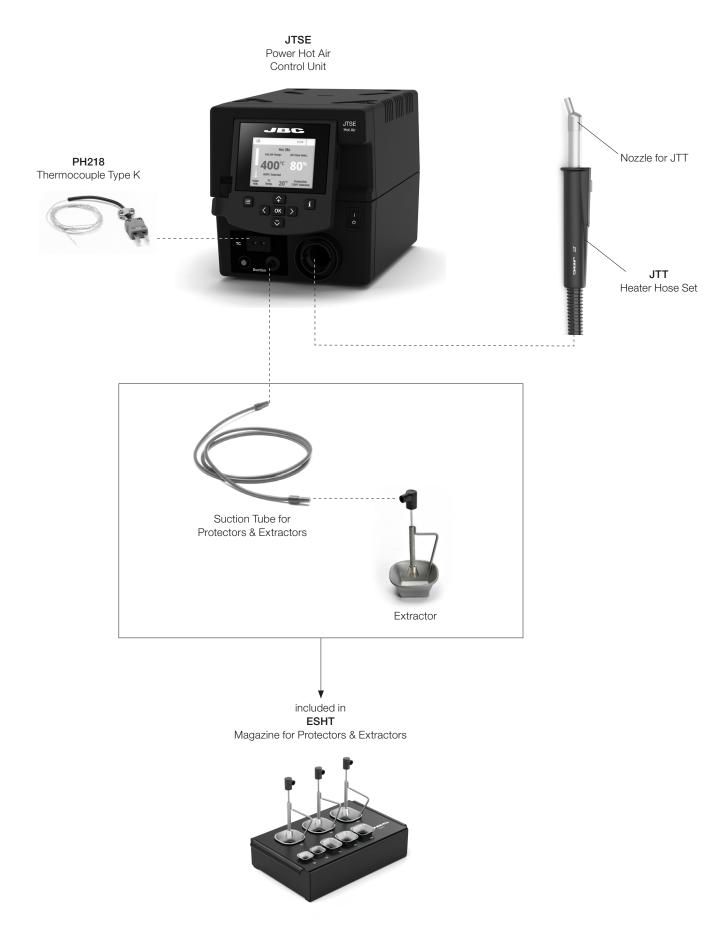

#### Specifications

JTSE Power Hot Air Station Ref. JTSE-9B (100 V) 50/60Hz. Input fuse: 8A. Rated current: 7A Ref. JTSE-1B (120 V) 50/60Hz. Input fuse: 8A. Rated current: 7A Ref. JTSE-2B (230 V) 50/60Hz. Input fuse: 4A. Rated current: 3A - Package Dimensions / Weight: 545 x 345 x 275

 $(L \times H \times W)$ 

545 x 345 x 275 mm / 7.89 kg 21.5 x 16.6 x 10.8 in / 17.39 lb

Complies with CE standards. ESD safe.



Warranty

Information regarding the warranty of each product can be found on the final page of its instruction manual.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.